PANDIGITAL®

Effortlessly Moving Images Out of your Camera and Into your Life

Digital Photo Frame
User Guide

PI7002AW, PI9001DW, PI1003DW

Sign up now to enjoy the following benefits…

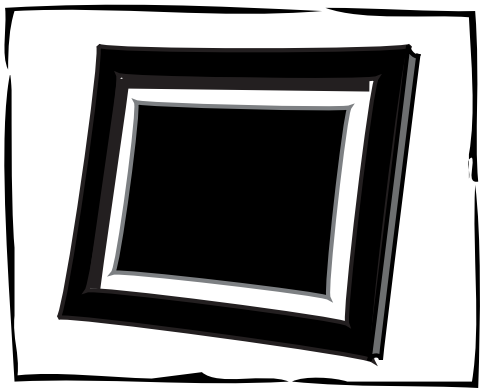

Qualify to win a FREE digital photo frame!*
(valid in USA only)

Register your FREE 1-year warranty!**

Sign up now at…
http://www.pandigital.net

*For details, go to our website: www.pandigital.net

**The online signup is for the purpose of user and product registration. Failure to register does not in any way diminish any of your standard warranty rights, as described in the documentation included with your product.

NOTE: If you must mail your 1-year registration, please send your name, address, phone number, model & serial number, and when & where purchased to:
Pandigital, P.O. Box 2969, Dublin, CA 94568-2969 USA

Note: Your frame style and features may differ from those documented in this User Guide.

UG-E_PI7002AW-PI9001DW-PI1003DW_V1.5_06-09

Table of Contents

Introduction **5**
DPF Key Features 5
Compatible Memory Cards 5
What's in the Box 5
Overview of the DPF **6**
Remote Control **6**
Control Buttons on DPF **8**
Getting Started **9**
The HOME Screen **9**
SETUP Menu Overview **10**
About Selecting Options **11**
Select Media Source **11**
PHOTOS **11**
Photo Thumbnails 12
View Individual Photo during a Slideshow 12
Zoom or Rotate Photos 12
Adjust Screen Colors 13
Optimal Image Display 13
Photo Import Method 14
Display Current Time with Photos 14
Display Photo File Date/Time Stamp with Photos 14
Import Photos into Internal Memory 15
Delete Photos from Internal Memory 15
PHOTO SLIDESHOWS **16**
Slideshow of Photos in Internal Memory 16
Slideshow of Photos on your Media Source 16
Slideshow Folders 16
Play Slideshow from Slideshow Folder 17
Set Slideshow Interval 18
Set Slideshow Transition 18
Set Slideshow Shuffle 19

CALENDAR/CLOCK 19
Select Media Source for Calendar Slideshow.....20
Set Schedule 20
Disable Schedule.....20
Run the Schedule 21
Run Schedule from Slideshow 21
Run Schedule from CALENDAR/CLOCK Screen 21
Set the Date and Time.....22
DPF to PC – USB Connection.....22
Set Sleep Mode.....25
Set Language 25
Reset to Factory Defaults 25
Frequently Asked Questions.....26
Important Safety Precautions 27
Cleaning the DPF 28
Product Specifications 28
Limited Warranty.....29
FCC Statement 30

Introduction

Welcome to the Pandigital Multimedia Digital Photo Frame (DPF). Now you can display your digital photos directly from your memory card, no computer is necessary.

DPF Key Features

- Simple Plug & Play
- Displays digital **photo** files (JPEG up to 16 mega pixels)
- Displays **Calendar/Clock** with photo slideshow
- Does not require a computer
- Infrared Remote Control and control buttons on the frame
- 512MB or 1GB Internal Memory *(depending on model)*
- 15:9 or 16:9 Aspect Ratio *(depending on model)*
- USB2.0 Device Port

Compatible Memory Cards

Compatible memory cards include: Secure Digital™ (SD), MultiMedia Card™(MMC), xD Card, Memory Stick™(MS), MemoryStick Pro™, and Memory Stick Pro Duo™*****

***** The **Memory Stick Pro Duo**™ requires an additional adaptor to fit properly into the DPF *(not included).* You can purchase the adaptor at retail outlet stores that sell memory cards.

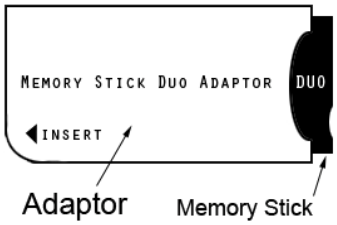

What's in the Box

- Digital Photo Frame (DPF)
- AC Power Cord and Adapter
- Infrared Remote Control
- White and Charcoal Decorative Paper Mats
- Quick Start Guide, User Guide

Overview of the DPF

(The memory card slots, ports, and jacks in your DPF may be different than those pictured here.)

Remote Control

You can access all of the DPF's features, and perform all of the functions by using the remote control. You will be able to perform several functions with the remote control that are not possible with the top-back panel control buttons.

Note: Before *first time use*, pull the plastic tab sticking out of the remote control. It protects the battery and the remote control will not work unless it is removed.

Overview of Remote Control

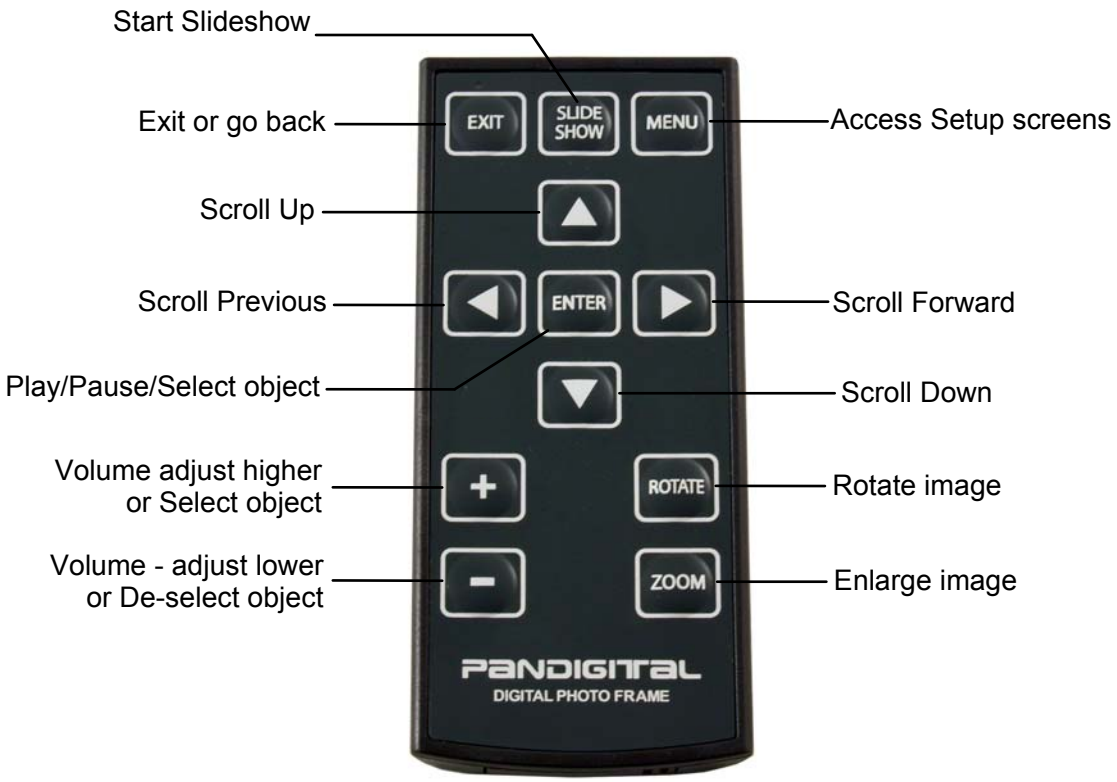

Safely Store Remote Control

You can avoid misplacing the remote control by safely storing it on the back of the DPF when not in use.

The **top back** of the remote control has a built-in magnet and the back of the DPF has a 'magnetic area' so you can simply attach the remote control to the back of the DPF for safe keeping.

TIP: Remove sticker before use.

Replace the Remote Control Battery

1. Hold the remote control with the buttons facing down.
2. Push and hold the small release tab while pulling the battery tray out.
3. Replace the “CR2025” Lithium battery on the tray with the positive (+) side facing up.
4. Push the tray back in until it clicks into place.

Control Buttons on DPF

You can perform many *(but not all)* of the DPF functions by using the control buttons located on the top-back panel of the DPF. Their basic functions are the same no matter when you use them.

***TIP**: The instructions throughout this User Guide only reference the use of the remote control. However, you can use the frame control buttons when the ◀ ▶, **ENTER**, **EXIT**, and **MENU** buttons are referenced when desired.*

Button	Action
◀	Scroll left
ENTER	Select the highlighted option, start a Slideshow, Play and Pause
▶	Scroll right
EXIT	Exit the current display, or go back a screen
MENU	Displays function setup screens

Getting Started

1. Plug the AC Power Adapter into the DPF's DC power jack and an electrical wall outlet.
2. Slide the power button on the left side of the DPF up to the ON position.
3. If prompted, select the desired language for the user interface display *(varies by model).*
4. After the initial start up screen is displayed, a slideshow will automatically begin displaying the photos that are stored in the internal memory.
5. To view your own photos, insert a memory card containing your photos into the slot on the DPF. Press **ENTER** on **Start Slideshow**.

CAUTION: The memory cards will only fit in one direction; do not force them as this will damage the card reader.

The HOME Screen

The main DPF features, PHOTOS and CALENDAR/CLOCK, are accessed from the HOME screen.

To access the HOME screen while a slideshow is playing, press **MENU**.

PHOTOS	Display your photo files (.JPG or .JPEG) individually or as slideshows. PHOTOS-**Manage**: set viewing preferences, assign photos to category folders, import and delete photo files *(page 11)*

CALENDAR	View calendar and clock with photo slideshow, and manage the calendar and clock settings *(page 19)*
Edit	Quick access to single photo manage mode for Zooming, Rotating, or Deleting currently displayed photo.

SETUP Menu Overview

Use the Setup Menu for DPF functions to optimize your viewing/listening preferences.

On the HOME screen press **MENU** to display the Setup Menu screen.

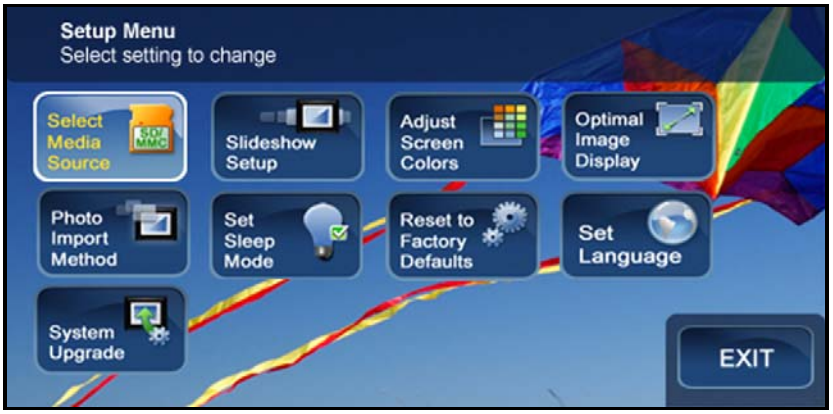

Select Media Source	Select the media source for current viewing *(page 11)*
Slideshow Setup	Set multiple slideshow functions to optimize your viewing preferences *(page 16)*
Adjust Screen Colors	Adjust LCD screen settings as desired *(page 13)*
Optimal Image Display	Set photos to display as actual photo size, or optimized to best fit the screen *(page 13)*
Photo Import Method	Set photos to be imported compressed or original resolution and file size *(page 15)*
Set Sleep Mode	Power saving function *(page 25)*
Reset to Factory Defaults	Returns all function settings to the factory defaults *(page 25)*

Set Language	Select desired DPF display language *(page 25)*
System Upgrade	Used for firmware upgrades

About Selecting Options

Throughout this User Guide, when you are instructed to 'select' a function option or button, unless otherwise instructed, use ◄ ► to highlight **[the referenced option]**, and then press **ENTER** to select.

Select Media Source

If you have inserted one or more external media sources *(i.e., memory card)*, you can use the **Select Media Source** function to switch between the internal memory and your external media source for viewing your photos.

You will also use this function to view the contents of the **Slideshow Folders** after you assign photos to these folders *(page 16)*.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Select Media Source**, and then select the desired media source *(sources not present will not be available)*.

   Internal Memory = Built-in flash memory
   SD/MMC = Secure Digital™ / Multi Media™ card
   MS = Memory Stick™ (Standard, Pro, and Duo)
   xD = Standard flash memory card
   Slideshow Folders = View photos after assigning to folders (page 16)

3. Press **EXIT** to return to previous screen.

PHOTOS

The PHOTOS feature includes many functions for optimizing and customizing your viewing preferences. You can view your photos individually or as slideshows. Other optional functions allow you to

display the current time with your images, display the photo file date/time, adjust the screen colors, choose slideshow transitions, and even schedule slideshows according to your weekly schedule.

Photo Thumbnails

1. On the HOME screen, select the PHOTOS-Manage button.

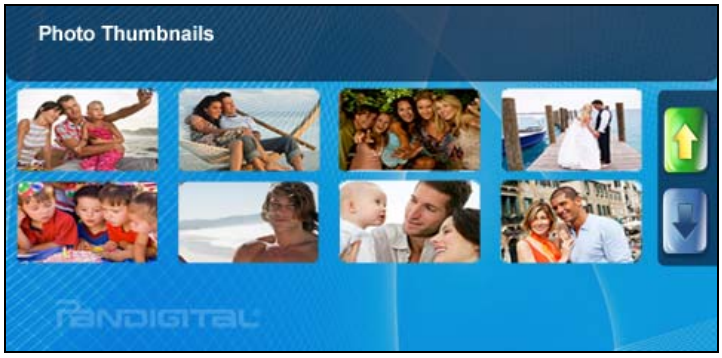

2. Use ◀ ▶ ▲ ▼ to scroll through individual photos, or use the **Page Up/Page Down** arrows to scroll full pages.
3. To view an individual photo in full screen, press **ENTER** on the highlighted photo.
4. While the photo is displayed, you can use ◀ ▶ to view the next/previous photos.
5. Press **EXIT** to return to previous screen.

View Individual Photo during a Slideshow

1. With the desired photo displayed, press **EXIT** to pause the slideshow.
2. The photo will be displayed approximately 60 seconds and then the slideshow will automatically resume, or you can press **ENTER** or **SLIDESHOW** to resume the slideshow.

Zoom or Rotate Photos

You can temporarily magnify or rotate photos while viewing them in single photo view. The rotation of a photo will be saved only for photos in the internal memory.

Zoom or Rotate a photo during a slideshow

1. With the photo displayed that needs rotating, press **ZOOM** or **ROTATE**, multiple times if necessary, to achieve the desired view.
2. Press **SLIDESHOW** to resume the slideshow.

Zoom or Rotate a photo from the Photo Thumbnails screen

1. On the HOME screen, select the PHOTOS-**Manage** button.
2. On the **Photo Thumbnails** screen, press **ENTER** to select the desired photo to be magnified or rotated, and then press **ZOOM** or **ROTATE** multiple times if necessary to achieve the desired view.
3. Press **EXIT** to return to the **Photo Thumbnails** screen.

***TIP**: When a photo is zoomed, you can pan around the photo by using ◀ ▶ ▲ ▼ to view portions of the photo that are not currently visible.*

Adjust Screen Colors

You can adjust the four LCD color levels for optimal image viewing.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Adjust Screen Colors**.
3. Use ▲ ▼ to scroll through the LCD options, and use ◀ ▶ to adjust the setting until the desired view is achieved.
4. Use ▲ ▼ to select **Done**.
5. Press **EXIT** to return to previous screen.

***TIP**: You can also adjust the brightness with the dial on the left side of the DPF.*

Optimal Image Display

You can choose the desired display mode for displaying your photos on the DPF as follows:

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Optimal Image Display**, and then select the desired setting.

Original = Displays photos in actual photo size.
Optimal *(default)* = Optimizes the size and resolution to best fit the screen, which may result in part of a photo not being visible on the screen.

3. Press **EXIT** to return to previous screen.

Photo Import Method

When importing files into the internal memory from an external media source, the file can be optimized or left as the original file size and resolution.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Photo Import Method**, and then select the desired setting.

Optimized *(default)* = The photo file is downscaled in size and compressed into a smaller sized JPEG, allowing more photos to be stored in the internal memory.
Original = The photo file is stored keeping its original size and resolution

3. Press **EXIT** to return to previous screen.

Display Current Time with Photos

You can have the current time displayed with your photos if desired.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Slideshow Setup**, and then select **Yes** or **No** under **'Display current time with photos?'**.
3. Select **Done**.
4. Press **EXIT** to return to previous screen.

***TIP**: If the time is incorrect, refer to **Set the Date and Time** on page 21 to set the clock.*

Display Photo File Date/Time Stamp with Photos

Most digital cameras typically include a Date/Time stamp when saving photo files. If your photo files contain this Date/Time information, you can have it displayed with your photos if desired.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Slideshow Setup**, and then select **Yes** or **No** under

'Display photo file date/time stamp?'.

3. Select **Done**.
4. Press **EXIT** to return to previous screen.

Import Photos into Internal Memory

You can import your photo files from memory cards into the DPF's internal memory. The number of photo files you can import depends on file size and available memory.

Import <u>All</u> Photos into Internal Memory

1. Insert your media source into the DPF. The memory card option screen will be displayed.
2. Select **Import All Photos**.
3. When import is complete, press **EXIT** to return to previous screen.

Import <u>Individual</u> Photos into Internal Memory

1. Insert your media source into the DPF. The memory card option screen will be displayed.
2. Select **Select Photos to Import**.
3. Use ◀ ▶ ▲ ▼ to scroll through the photos, and then press '**+**' to select the desired photos to import *('-' will deselect)*.
4. Press **MENU**, and then select **Import Selected Photos**.
5. Press **EXIT** to return to Photo Thumbnails screen.

Delete Photos from Internal Memory

You can delete photo files from the DPF's internal memory, but not from an external media source *(i.e., memory card)*. Refer to your media source documentation for instructions on deleting files from these devices.

***TIPS**: It is recommended to make backup copies of the photos before you delete them from the DPF.*

Be sure you have Internal Memory *as your selected media source.*

1. On the HOME screen, select the PHOTOS-**Manage** button.

2. To delete all photos, press **MENU**, and then select **Delete All**.

   To delete individual photos, use ◀ ▶ ▲ ▼ to highlight the photos you want to delete, press '**+**' to select *('-' will deselect)*, press **MENU**, and then select **Delete Selected**.

3. A confirmation message appears; select **Yes** to delete the photos, or **No** to keep the photos in the internal memory.

***TIP**: If, by mistake, you select **Yes** to delete photos, press **EXIT** to cancel the delete operation. Photos already deleted will not be automatically restored.*

PHOTO SLIDESHOWS

The DPF can display all of the photos on the selected media source as a slideshow, or you can select specific photos for a custom slideshow.

Slideshow of Photos in Internal Memory

You can play a slideshow of the photos stored in the DPF's internal memory by simply powering on the DPF *(with no external media source inserted)* and then wait for the slideshow to automatically begin.

Slideshow of Photos on your Media Source

Insert an external media source and then power on the DPF; the slideshow will begin displaying your photos.

If you insert a media source after power on, a memory card option screen is displayed; select **Start Slideshow**.

Slideshow Folders

There are five category folders in the internal memory into which you can assign photo files for personalized organization and slideshows *(these folder names cannot be changed)*:

Family – Friends – Vacation – Events – Others

Only photos stored in the internal memory can be assigned to the slideshow folders. Assigned photos are not physically moved or copied into the folders, rather, a link is assigned to the photo so it appears to be located in the folder. If you delete the actual photo file from internal memory, the link to the folder will also be deleted.

Assign Photos to Slideshow Folder

1. On the HOME screen, select the PHOTOS-**Manage** button.
2. On the Photo Thumbnails screen, use ◀ ▶ ▲ ▼ to scroll through your photos.
3. To assign an individual photo: With the desired photo displayed, press **MENU**.

   To assign multiple photos: Press '**+**' to select desired photos *('-' will deselect)*, and then press **MENU**.
4. Select **Assign to Folder**, and then select the desired folder into which you want to assign the photos.
5. Press **EXIT** to return to previous screen.

Play Slideshow from Slideshow Folder

1. On the HOME screen, press **MENU**.
2. Select **Select Media Source**, and then press **ENTER**.
3. Select Slideshow Folders.
4. Select the desired folder containing the photos you want to view in your slideshow.
5. On the Folders Thumbnails screen, press **Slideshow**.

Copy or Reassign Photos to Different Folders

After assigning photos to folders you can copy those photos to other folders, or you can reassign photos to appear in a different folder.

1. With the slideshow folders slideshow playing *(per above instructions)*, press **EXIT** twice to display the Folder Thumbnails screen.
2. To copy or reassign an individual photo, highlight the desired photo and then press **MENU**.

To copy or reassign multiple photos, use ◀ ▶ ▲ ▼ to scroll through the photos, use '**+**' to select those that you want to copy or reassign *('-' will deselect)*, and then press **MENU**.

3. Select **Copy to Folder** or **Reassign to Folder**, and then select the desired folder into which you want to reassign or copy the photos.

Set Slideshow Interval

You can set the speed at which the slideshow photos transition from one to another.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Slideshow Setup**,
3. Use ▲ ▼ to select **Slideshow Interval**, and then use ◀ ▶ to select your desired setting.

   5, 10, 30, 60 seconds, 1 hour, or **24 hours**

4. Select **Done**.
5. Press **EXIT** to return to previous screen.

Set Slideshow Transition

You can set the transition 'special effects' as photos transition from one to another during a slideshow.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Slideshow Setup**.
3. Use ▲ ▼ to select **Slideshow Transition**, and use ◀ ▶ to select your desired setting.

   Off = Photos transition from one photo to the next without special effects.
   Random *(default)* = Photos will transition using all special effects randomly throughout a slideshow.
   Remaining special effects = Choose individual transition effect as desired

4. Select **Done**.
5. Press **EXIT** to return to previous screen.

Set Slideshow Shuffle

You can set the slideshow to display your photos in a random 'shuffle' order, or display them in the order as stored on the selected media source.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select **Slideshow Setup**.
3. Use ▲ ▼ to select **Slideshow Shuffle**, and then use ◀ ▶ to select your desired setting.

   ON = Displays photos randomly
   OFF*(default)* = Displays photos in the order found on selected media source

4. Select **Done**.
5. Press **EXIT** to return to previous screen.

CALENDAR/CLOCK

Your DPF can be used as a personal desk calendar which displays a continuous slideshow of photos on the selected media source, and real-time clock.

To display the CALENDAR/CLOCK screen, select **CALENDAR** from the HOME screen. The slideshow will be displaying photos found on the currently selected media source.

Select Media Source for Calendar Slideshow

You can easily change the media source if you want the calendar/clock slideshow to display photos from a different media source *(i.e., memory card, slideshow folder)*.

1. On the CALENDAR/CLOCK screen, press **MENU**, and then select the **Media Source** button in the upper right corner.
2. Select the desired media source from the Select Media screen.

Set Schedule

You can schedule the DPF to automatically go into a "stand-by" mode and resume operation according to your weekly schedule. For example, if you have your DPF on your desk at work, you may want to display the calendar/clock or play a slideshow from 8:30am to 5:30pm every weekday, and then set the DPF to remain in stand-by mode throughout the weekend. The following Monday morning, the DPF would resume operation at 8:30am.

1. On the CALENDAR/CLOCK screen, press **MENU**.
2. Select **Set Schedule**.
3. Use ◀ ▶ to move between the fields and ▲ ▼ to change the field values in **Weekdays On/Off**.
4. To set the Weekends On/Off, select the **Enable Weekends Schedule** button, and then use ▲ to access the settings.
5. Use ◀ ▶ to move between the fields and ▲ ▼ to change the field values in **Weekends On/Off**.
6. When correct times are set, select **Done** to return to the previous screen.

Disable Schedule

After the schedule has been enabled *(per above instructions)*, you can disable the schedule whenever desired.

1. On the CALENDAR/CLOCK screen, press **MENU**.
2. Select **Set Schedule**, and then select the **Enable Weekdays Schedule** or **Enable Weekends Schedule** button. The time fields will display **OFF**.

3. Select **Done**.
4. Press **EXIT** to return to previous screen.

Run the Schedule

After the schedule times have been set *(per above instructions)*, you will use the **Run Schedule** function whenever you want the schedule to take effect.

There are two methods for running the schedule, either from a slideshow or from the CALENDAR/CLOCK screen.

CAUTION: After you select the **Run Schedule** function, any user intervention will cancel the activation *(i.e., pressing remote or control button, powering off)* and the schedule will not take effect until you select this function again to re-activate.

Run Schedule from Slideshow

1. Start a slideshow, and then press **ENTER** when the **Run Schedule** button appears *(approx 10 seconds)*. A small timer clock will appear indicating the schedule is active. To run the schedule when the **Run Schedule** button is no longer displayed, restart your slideshow and then press **ENTER** when the **Run Schedule** button appears again.
2. The DPF will go into stand-by mode according to the schedule, and when it resumes operation, the slideshow will again begin to play.

Run Schedule from CALENDAR/CLOCK Screen

1. On the CALENDAR/CLOCK screen, press **MENU**.
2. Select **Run Schedule**. A small timer clock will appear indicating the schedule is active, and then the DPF will operate according to the set schedule.
3. The DPF will go into stand-by mode according to the schedule, and when it resumes operation, the Calendar/Clock screen will again be displayed.

Set the Date and Time

1. On the CALENDAR/CLOCK screen, press **MENU**.
2. Select **Set Date/Time**, and then select the options and use ▲ ▼ to change the field values.
3. Select **Done**.
4. Press **EXIT** to return to previous screen.

DPF to PC – USB Connection

You can connect the DPF to a Windows PC or Macintosh computer via a USB cable to copy files between the computer and the DPF's internal memory.

If you have memory cards inserted in the DPF, you can also copy between the PC, internal memory, and memory cards.

Connect DPF to Windows PC

1. Connect the small end of the USB cable to DPF's Mini USB port, and the larger end to an available USB port on your computer.
2. A window opens listing all drives connected to your computer, similar to the following screen:

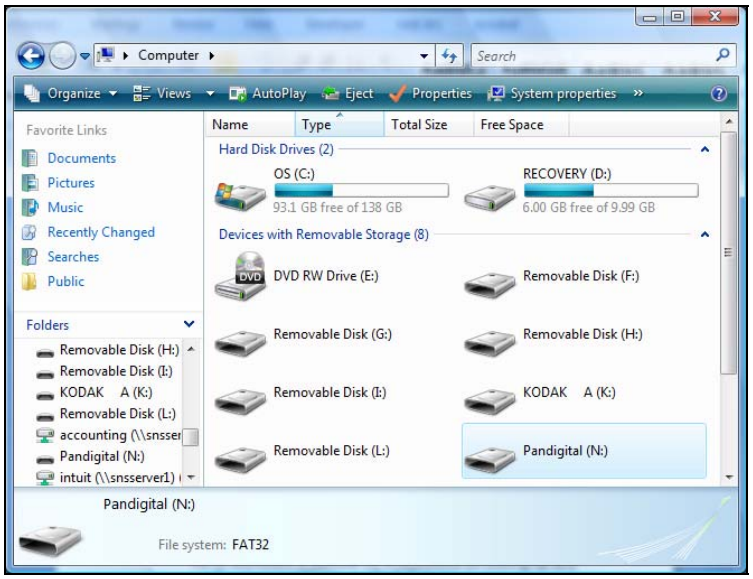

3. The internal memory (*titled **Pandigital**)* and each memory card present in the DPF will be associated with one disk drive on your PC.

☞ **IMPORTANT**: If your PC is connected to Local Area Network drives, or if you have multiple drive letters already assigned to peripheral devices, you will need to manage your drive settings in Windows to free up the four drive letters immediately following your CD-ROM drive so the DPF can assign them to memory card slots properly.

4. Double-click the desired drive to display the files on the card. The following example shows a card listing several JPG images.

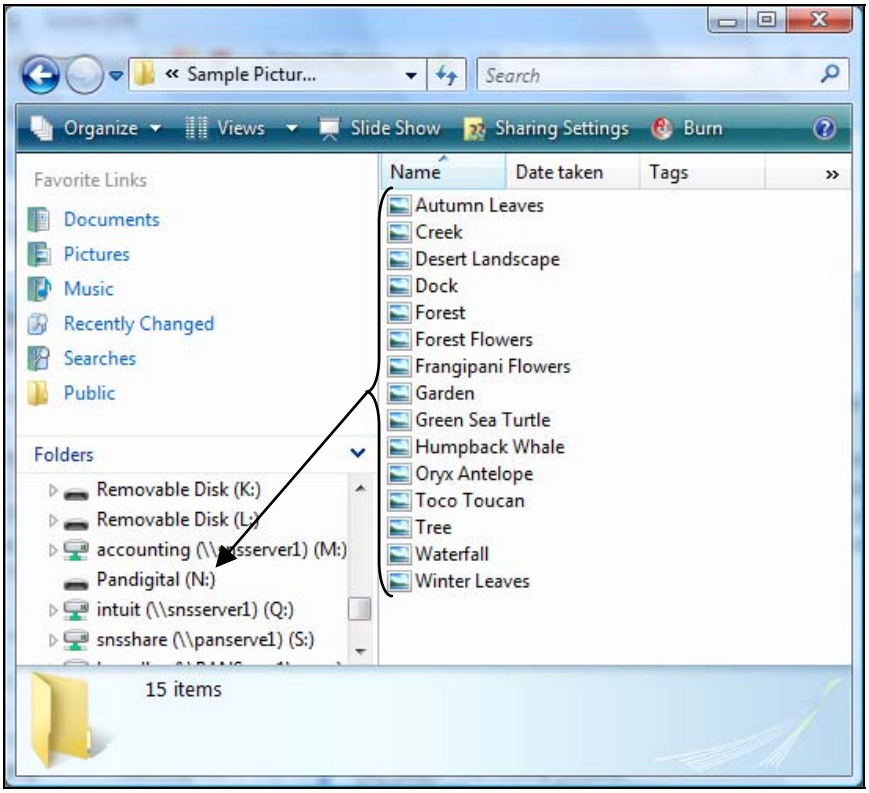

5. To copy files from a media source, select and drag them into the DPF's internal memory drive *(**Pandigital**)*.
6. Similarly, to copy files from your computer to the internal memory, first locate the files on your computer, select the files you want to copy, and then drag and drop them into the DPF's internal memory drive.

***TIP**: Most cameras and graphic programs store photos in the Windows XP 'My Pictures' or Vista 'Pictures' folder. If you didn't save them to any other location, you may find them there.*

Disconnect DPF from Windows PC

It is important to always perform a safe PC 'release' before disconnecting the DPF USB cable from the PC.

⚠ **WARNING**: Do not unplug or switch off the DPF when files are being transferred, as that can seriously damage the memory.

Windows Vista

1. On the Windows System Tray, click the hardware removal icon .
2. Click the **Safely remove USB mass Storage device** message corresponding with the DPF device drive.
3. When the message *"This device can now be safely removed from the computer"* appears, you can disconnect the USB cable from your computer.

Windows XP

1. On the Windows System Tray, click the hardware removal icon .
2. Click **Remove Hardware Safely**.
3. Select the storage device corresponding with the DPF, and then click **Stop** to disconnect. A final dialog box opens.
4. Click **Close**.
5. When the *message* ***"It is now Safe to Disconnect Hardware"*** appears, you can disconnect the USB cable from your computer.

Connect DPF to Macintosh Computer

1. Use a USB cable to connect the DPF to your Macintosh computer.
2. Macintosh will recognize the DPF as an external storage device.
3. Drag and drop files between the two devices as you normally move files.

Disconnect DPF from Macintosh Computer

1. To safely disconnect the DPF from your Macintosh, select DPF's icon on your desktop and press **Command-e** to eject the disk.
2. When the icon is no longer on the desktop, it is safe to unplug the USB cable.

Set Sleep Mode

The DPF will stay on until you power it off, however, to save power you can set it to automatically go into a sleep mode when left idle for a specific amount of time.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select Set Sleep Mode, and then select the desired setting.

   OFF *(default)* = Power saver is 'disabled'; DPF will remain on until you power it off or change the sleep mode setting
   2/4/8 Hours = The DPF will automatically go into sleep mode when left idle the specified amount of time

3. Select **Done**.
4. Press **EXIT** to return to previous screen.

Set Language

Depending on model, this DPF may include multiple languages for the user interface display.

1. On the HOME screen, press **MENU** to display the Setup Menu.
2. Select Set Language, and then select the desired language.

Reset to Factory Defaults

If you have changed function settings, using this feature will restore all settings to the factory pre-set defaults.

1. On the HOME screen, press **MENU** to display the Setup Menu.

2. Select **Reset to Factory Defaults**, and then select **Yes** to reset, or **No** to leave current settings.
3. Press **EXIT** to return to the HOME screen.

Frequently Asked Questions

Q: How do I set up my DPF?

A: It is very simple to get your Digital Photo Frame setup. Just plug the power adapter into the DPF and into a standard wall outlet, and then power it on. A slideshow will begin displaying the images pre-loaded in the internal memory. To view your own photos, insert a memory card into the card slot on the side of the DPF. Select **Start Slideshow** from the memory card option screen.

Q: What memory cards can the Digital Photo Frame Read?

A: Compatible memory cards include: Secure Digital™ (SD), MultiMedia Card™(MMC), xD Card, Memory Stick™(MS), MemoryStick Pro™, and Memory Stick Pro Duo™.

Q: I set up the Digital Photo Frame; why won't it turn on?

A: The power adapter may not be securely connected to the DPF or the power switch may not be in the ON position.

Q: I have a memory card in the DPF; why can't I view my photos?

A: A) Be sure that the memory card is one of the formats listed above and that the files on the card are JPEG images files. Some digital cameras save images in other formats. Refer to your camera's user guide if your photos are not JPEG files.
B) Make sure the memory card is inserted all the way into the card slot.
C) On the HOME screen, press **MENU**, choose **Select Media Source**, select the desired media source, and then press **ENTER**. Press **EXIT** to return to the HOME screen and then select the PHOTOS-**PLAY** button. The slideshow should begin displaying your photos.

Q: Why is the photo display slower with some photos than others?

A: Higher resolution photos load more slowly. Try using lower resolution photos or down scaling your images. Refer to your camera's operating user guide for details on down scaling your photos.

Q: Can I insert multiple memory cards?

A: No, there is only one memory card slot.

Q: Does the DPF have built-in (internal) memory?

A: Yes. The memory size varies by model.

Q: Does the DPF support all JPEG and Motion JPEG files?

A: No. The DPF only supports JPEG and Motion JPEG files taken from a digital camera. The DPF may not read all image files downloaded from the Internet or from other software graphic applications.

Important Safety Precautions

Always follow these basic safety precautions when using your Multimedia Digital Photo Frame (DPF). This will reduce the risk of fire, electric shock, and injury.

⚠ **WARNING**: Do not expose this product to rain or moisture.

Do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

- The DPF is for indoor use only.
- Unplug the DPF before performing care and maintenance.
- Do not block the ventilation holes on the back of the DPF at any time.
- Keep your DPF out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the DPF.
- Only use the AC adapter included with the DPF. Using any other power adapter will void your warranty.
- Unplug the power cord from the power outlet when the unit is not in use.

Cleaning the DPF

Treat the screen gently, it is made of glass and can break. To clean fingerprints or dust from the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen. If you use a commercial LCD Cleaning Kit, do not apply the cleaning liquid directly to the LCD screen. Clean the LCD screen with cleaning cloth moistened with the liquid.

Clean the outer surface of the DPF (excluding the screen) and the remote control with a soft cloth dampened with water.

Product Specifications

Screen	**7", 9", or 10.1" LCD Screen Digital Photo Frame**
Compatible Media Sources	5-in-one Card reader Secure Digital™, Multi Media Card™, xD Memory Card™, Memory Stick™, Memory Stick PRO™, Memory Stick PRO DUO
Features	▪ Displays Photos (JPEG) individually or as slideshow ▪ Calendar and Clock with photo slideshow ▪ Simple Plug & Play ▪ No computer required
File Format	JPEG images
USB Port	USB2.0 Device
Internal Memory	Compressed images: 512MB 1GB 7" up to 4000 up to 8000 9" up to 3000 up to 6000 10.1" up to 2500 up to 5000
Decorative Paper Mats	2 – White and Charcoal
Power Adapter	Input: 100V - 240V AC, 50~60 HZ
	Output: 5V 2.0A or 9V 2.0A *(depending on model)*

Limited Warranty

The limited warranty set forth below is given by Pandigital with respect to Pandigital brand electronics products purchased and used in the United States of America. Pandigital warrants this product against defects in material or workmanship as follows:

LABOR: For a period of one (1) year from the date of purchase, if this product is found to be defective, Pandigital will repair or replace the product, at its option, at no charge. After this one (1) year, labor charges will be charged on a case by case basis.

PARTS: For a period of one (1) year from the date of purchase, if this product is found to be defective, Pandigital will supply at no cost, new or rebuilt replacement parts, at its option, at no charge. After this one (1) year period, parts will be charged for on a case by case basis. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This warranty does not cover: (1) customer instruction, installation or setup; (2) cosmetic damage or damage due to accident, misuse, abuse or negligence; (3) commercial use of the product; (4) modification of any part of the product; (5) damage due to improper operation, improper maintenance, or connection to an improper power supply; (6) loss of data, regardless of value or format, that may result through proper and/or improper use of the product; (7) damage due to an attempted repair of the product by anyone other than a facility authorized by Pandigital to service the product; (8) consumables (such as fuses and batteries). This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair costs will be charged. This warranty is only valid with written documentation detailing the complaint attached to the outside or inside of the carton. This warranty is invalid if the factory applied serial number has been altered and or removed from the product. This warranty does not provide protection for the loss of data, regardless of format. Pandigital reserves the right to modify and design this product without prior notice, written or otherwise.

To obtain warranty service, you must deliver the product freight prepaid in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase.

Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Pandigital, its parent company, affiliates or subsidiaries, shall not be liable for any incidental or consequential damages for breach of any expressed or implied warranty on this product. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, so the above

limitations or exclusions may not apply. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

All content included on the Pandigital website as well as Pandigital products, including pre-loaded demonstration images, digital media, digital cookbooks, text, graphics, logos, designs, photographs, button icons, images, audio/video clips, digital downloads, data compilations, and software, is the property of Pandigital or its suppliers and is protected by United States and international copyright laws or other intellectual property laws and treaties. Said content shall not be reproduced or used without express written permission from Pandigital and its suppliers respectively.

Use of this product constitutes acceptance of these terms and conditions of warranty.

Technical support telephone number: 1-800-715-5354.

FCC Statement

FCC Part 15 Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ **WARNING**: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.